Specifications

For other materials or modifications, please consult TESCOM.

FLUID MEDIA

Non corrosive/corrosive gases and mixtures up to high purity of 6.0 (99.9999 Vol%)

OPERATING PARAMETERS

Pressure rating per criteria of ANSI/ASME B31.3

Maximum Inlet Pressure

4350 psig / 300 bar

Outlet Pressure Range

0 to 145 psig / 0 to 10 bar 0 to 290 psig / 0 to 20 bar

Material

Nickel-plated Brass or Stainless Steel

Leak Rate

10⁻⁷ mbar l/s He

Operating Temperature

-4°F to 158°F / -20 °C to 70 °C

Nominal Flow Rate

 $10 \text{ m}^3/\text{h}$ based on Nitrogen, $C_V = 0.06$

MEDIA CONTACT MATERIALS

Body

316 Stainless Steel or Nickel-plated Brass

Diaphragm

316L Stainless Steel

OTHERS

Inlet Port Type and Size

G 3/8" female

Compression fitting 6 mm

Outlet Port Type and Size

Process Outlet: G 1/4" *

Purge Gas: G 1/4" *
Relief Valve: M 12x1 **

Cleaning

Cleaned for Oxygen Service

Weight (approximately)

17.6 lbs / 7.9 kg for 2x1 cylinder 8.1 lbs / 3.7 kg for 1 cylinder

- * Adapters to all metric and imperial tube sizes available! Please check data sheet "Fittings" for adaptors
- * * Adapter PIN to metric tube available! Please contact TESCOM.



PANEL FOR 1 CYLINDER WITH CONTACT GAUGE



DUAL STAGE COMPACT PANEL
AUTOMATIC CHANGEOVER WITH CONTACT GAUGES

The TESCOM Compact Panel is a central gas supply unit for the pressure control of analytical gases in laboratory facilities. Depending on the requirements, these units switch over to a spare cylinder in order to enable a continuous gas supply. The use of contact gauges allows the monitoring of empty gas cylinders.

Applications

- Central gas supply for the distribution of gases in laboratory applications
- Supply of gases for laser cutting applications
- Various other processes requiring continuos gas supply

Features and Benefits


- Few connections and minimized internal volume due to the integration of valves and pressure regulator in one body
- Suitable for ECD (Electron Capture Detector) applications
- Short purging time when changing cylinders
- Purging with process or inert gas
- Easy and quick to maintain a P & ID is located on front of the panel
- Stainless Steel mounting plate for corrosive environments
- Very compact design (fits into most gas cabinets)
- All versions contain a filter element in the inlet







Compact Panel Drawings

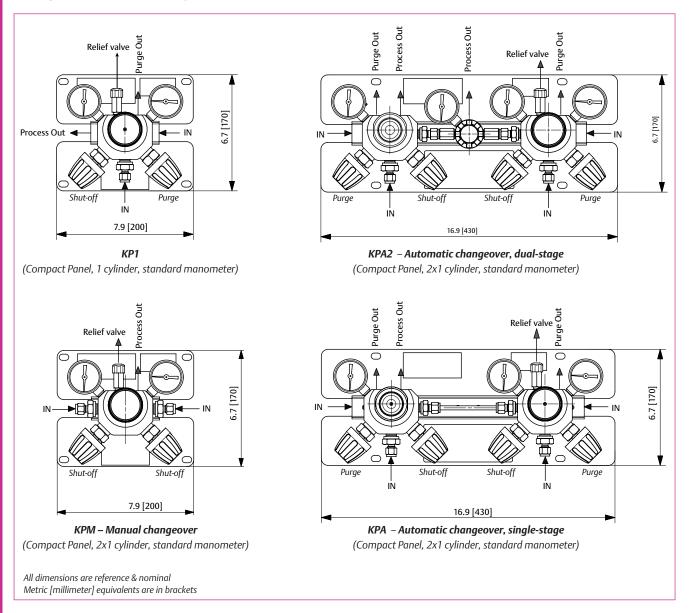

Compact Panel Part Number Selector

Repair Kits, Accessories & Modifications may be available for this product. Please contact TESCOM for more information.

Example for selecting a part number:

KP1-	1	KM	1
BASIC SERIES	MATERIAL	GAUGES	OUTLET PRESSURE
 KP1 1 Cylinder KPM 2x1 cylinder, manual changeover KPA 2x1 cylinder, automatic changeover, single stage KPA2 2x1 cylinder, automatic changeover, dual stage 	1 – Brass 6 – Stainless Steel	SM – Standard gauge KM – Contact gauge EX – Inductive contact gauge KG – Pressure switch	1 – 145 psig / 10.0 bar Set point 145 psig / 10 bar 2 – 290 psig / 20.0 bar Set point 290 psig / 20 bar

Please reference data sheets "Accessories for Panels" and "Fittings" for additional accessories for compact panel.

Please reference data sheet "System Components for Compact Panels" for information about annunciator system and emergency switch-off components.



WARNING! Do not attempt to select, install, use or maintain this product until you have read and fully understood the TESCOM Safety, Installation and Operation Precautions.

DCATLABO1259XEN2 © 2012 Emerson Process Management Regulator Technologies, Inc. All rights reserved. 05/2012. Tescom, Emerson Process Management, and the Emerson Process Management design are marks of one of the Emerson Process Management group of companies. All other marks are the property of their respective owners.



